 
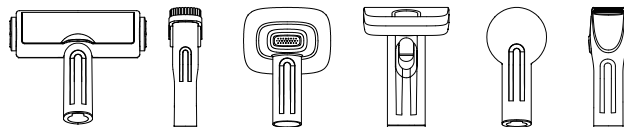 


Pet Grooming Kit&Vacuum

WP-GM01-STD

User Manual

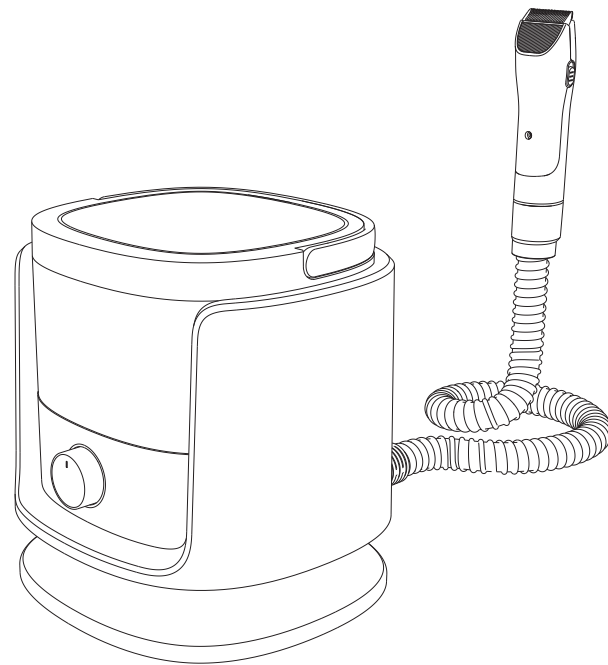

Safety Attentions

- This machine is designed for home use only. It is not suitable for commercial or industrial conditions, nor should it be used outdoors or in wet places;
- Never allow children or individuals with limited physical or mental abilities to use this product alone;
- Please use it safely and under the supervision of someone who understands how to use the product properly and is aware of the potential dangers;
- Be cautious when using near children or pets, and do not let them play with the product;
- Do not touch the plug or machine with wet hands, and do not vacuum up wet hair or liquid;
- If the power cord or plug is damaged, do not use the product;
- If the product is not functioning correctly, broken, left outside for an extended period, or has been exposed to liquids, contact our company immediately;
- Do not disassemble the product. Improper assembly may result in electric shock or fire, Contact our company for repairs;
- Do not vacuum flammable or combustible liquids, such as gasoline, and avoid using the product in areas with flammable or combustible gases;
- Do not pull on the power cord, place heavy objects on top of the machine, or let the door trap the cord. Also, do not vacuum cigarettes, matches, hot soot, or other burning, smoking, or hot items;
- Do not insert anything into the air inlet or block it. After use, maintenance, or replacement of parts, ensure that the plug is disconnected before handling the machine;
- Do not store the product outdoors, in the bathroom, or other damp locations;
- Avoid using aromatic or scented substances as filters, as they may cause fire;
- If the power cord is damaged, have it replaced by a professional from the manufacturer's maintenance department or a relevant service provider to avoid any risks.

Safety Attentions

- **Please do not operate or pull out the plug with wet hands**

This can cause failure and electric shock, which must be strictly prohibited.

- **Do not vacuum flammable or highly flammable substances such as cigarettes, and avoid using the product in areas with flammable liquids, as it can lead to fire or explosion.**

- **There may be an initial smell during the first time use**

But it is not harmful to the body and will disappear after a while. However, if there is a persistent burning smell, stop using the product immediately.

- **To prevent failure and accidents, please clean the dust cup and sponge filter regularly**

Make sure to turn off and unplug the machine before doing any maintenance.

- **Do not attempt to maintain the product while it is turned on**

As this can result in accidents or dangers. If the temperature of the product rises abnormally during use, stop operation immediately and let it cool down before continuing.

- **If the motor overheats or the air inlet is blocked, stop operation immediately**

remove the dust cup, and clean the sponge filter. Allow the product to cool down for at least 30 minutes before turning it back on.

- **Make sure all filters are properly installed before using the product**

As failure to do so can cause malfunctions.

- **Pay attention to sharp blades and right angles when using accessories**


such as Grooming brush and trimmers, as they can cause cuts or injuries.

***Note:**


- Please note that the hose has a conductive function and should not be used to suck up or immerse in water for cleaning purposes;
- Regularly check the hose for damage, and do not use it if it is damaged;
- Before cleaning or performing maintenance on the product, be sure to remove the plug from the socket to prevent accidents.

Product introduction

Host

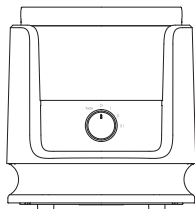

Vacuum Device

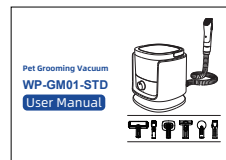


User manual

Accessories



 Grooming Brush



Deshedding Brush



 
Trimmer




2 in 1 flat brush



Massage brush

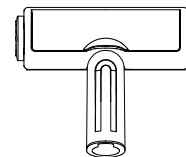

Pet hair roller brush

 

Clipping Comb x6



 
Hose

***Note:** If you find any accessories lacked, please contact our after-sales svervice in time.


Using instructions

Before Using


Put the dust container along the direction of the arrow in the figures

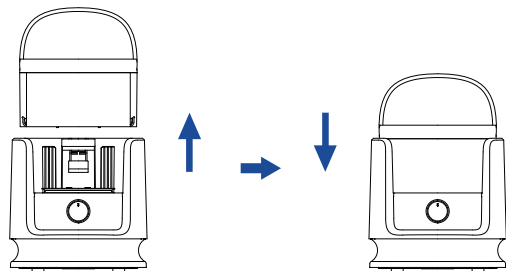

Rotate to lock the hose on the machine


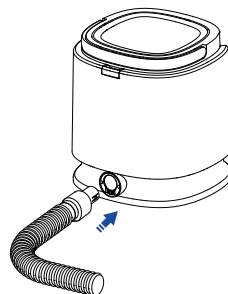 


Get the hose installed in place

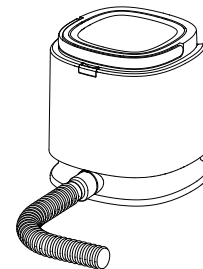 


The hose should be connected to the host and accessories

  Due to the functions required, please pay attention to the blades and sharp right angles of accessories to prevent cuts and injuries.

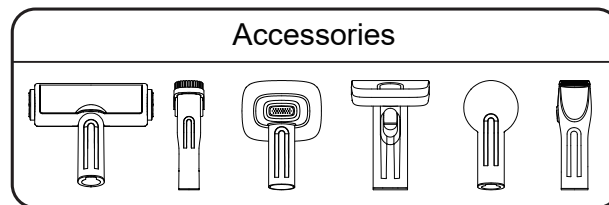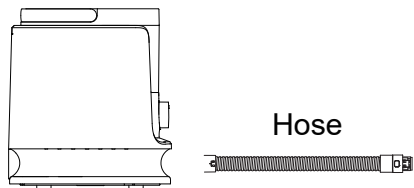

Using instructions

 How to use

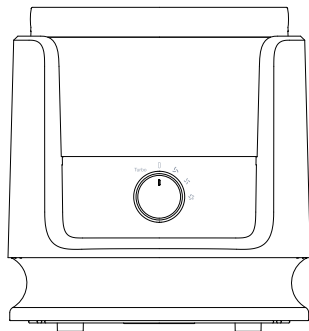


Functional description

1. Rotate to "flame" is the turbo mode, and the status of the light circle is all on and run;
2. Rotate to "square" is the standby mode, and the status of the light circle flash three times, then off;
3. Rotate to "fan" is the 1 level speed, and the light circle is fully on and flash slow, brightness is 20%;
4. Rotate to "lightning bolt" is the 2 level speed, and the light circle is fully on and flash slow, brightness is 100%;
5. Rotate to "lightning bolt" is the 3 level speed, and the light circle is fully on and flash faster, brightness is 100%;


Using instructions

 Use of Accessories

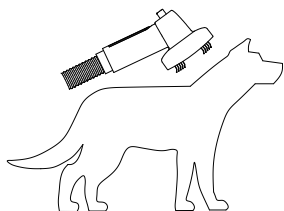

Grooming Brush

 
It can clean the floating hair on pets and the garbage in the hair, and at the same time it has the function of lengthening the hair, making the hair more fluffy.

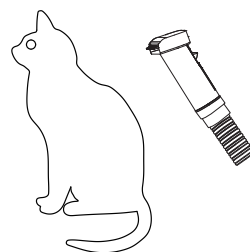

Deshedding Brush



Quickly and easily remove loose hair for long and short haired dogs and cats.

Note: During use, please pay attention to the cutting edge and sharp position, do not use excessive force to cause the skin scratches.

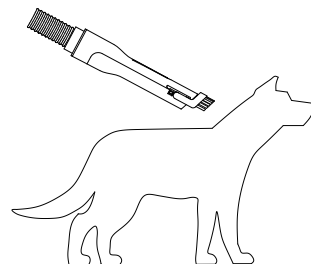

2 in 1 flat brush

Clean your pet's body and shed hair to achieve a clean effect.

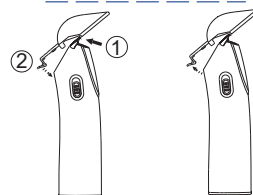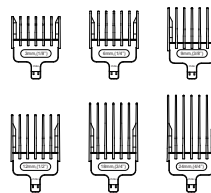

Install Take apart

Clipping Comb

According to different hair style needs to choose (optional use).




Note: The objects are scattered and small, please keep them properly when not in use.

***Note:** When using the product, avoid aiming the suction head directly at your pet's face.

Daily maintenance

Clean the dust cup

1. Remove the dust cup
Remove the dust cup by lifting it slightly in the direction of the arrow.
2. Open the cover and pour out
Push the clasp to open the dust cup and pour out the dander.
3. Place the dust cup
Install the dust cup in the direction of the arrow.

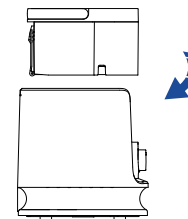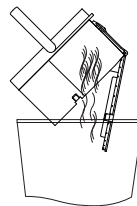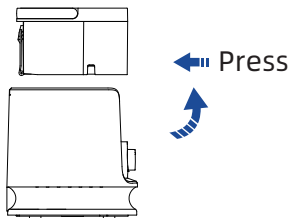


***Note:** When removing the dust cup, handle it with care and do so gently. After emptying the dust cup, allow it to fully dry before reinstalling to prevent any water from entering the motor and causing electric shock or damage to the machine.

Trimmer Cleaning

1. Remove the knife tip.
2. Remove debris from the suction port.
3. Add lubricant to cutter head.





2. Remove debris from the suction port.

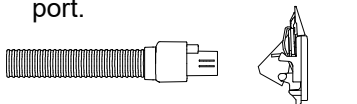

Tool head

Tool rest

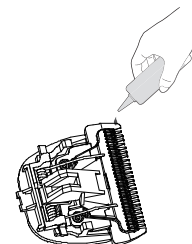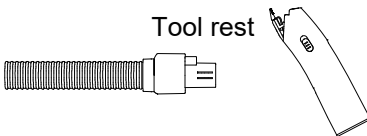


Daily maintenance

Change the HEPA Filter Every 6 Months


Remove the dust container, and take out the HEPA from the vacuum body.

Note: Continue to use the original filter and do not remove it.

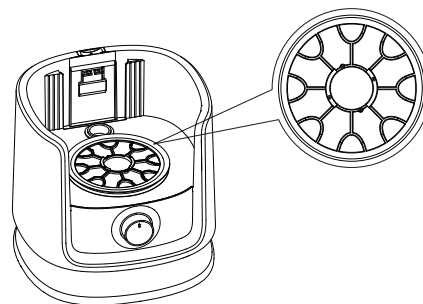


Clean the Sponge Filter


Remove the dust container and detach the sponge from the container

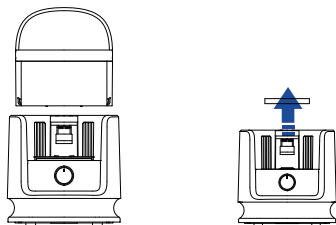


Place it in a well-ventilated place for at least 24 hours of drying

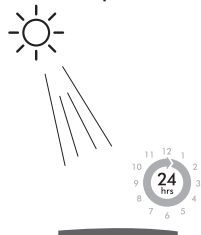

Wash the sponge with running water and drain it after washing

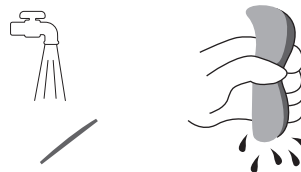

Install the sponge back into the container after it is dried. Ensure it has been installed.

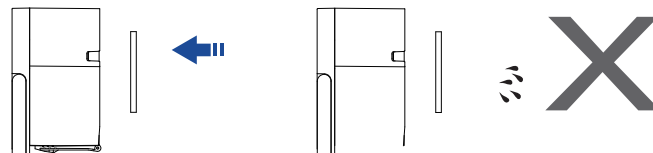

Product specification

Input	200–240V
Power	350W
Hose Length	1. 6m
Dust Cup Capacity	3. 5L
Product Size	254*245*272mm
Power Cord Length	2. 4m
Product N.W	3. 75Kg
Maximum Noise	75dB

Troubleshooting

Please stop using the product at once if any abnormal situation occurs during the use process.
Below are the troubleshooting problems for your reference.

	Problem	Reasons	Solutions
1	The vacuum cleaner does not turn on properly	The plug is not inserted correctly	Plug it back in
		The switch button is not turned on	Press the switch button to turn on the vacuum
		The vacuum is in a state of overheating protection	Check whether there is a blockage in the soft tube or the air inlet parts. And clean the dust container, sponge filter, and HEPA. Then install them back into the vacuum and wait for 60 min to turn it on again
		Other malfunctions	Contact customer service for help
2	Weak suction	The hose has a blockage	Clean the hose and the parts of the air inlet
		The dust container is full	Empty the dust container
		The sponge filter has a blockage	Clean the sponge filter and HEPA
		The dust container or accessories are not installed correctly	Check and reinstall the dust container and accessories according to the instructions
		The HEPA is not dry enough after washing	Only use the HEPA when it is dry enough after cleaning
3	The groomer does not turn on properly	The switch button is not turned on	Press the switch button to turn on the vacuum
		The blade/trimmer/grinder/brush has a blockage	Follow the instructions to clean the blockage on the blade/trimmer/grinder/brush
		Other malfunctions	Contact customer service for help
4	The groomer is not sharp enough	The blade/trimmer/grinder/brush has a blockage	Follow the instructions to clean the blockage on the blade/trimmer/grinder/brush
		Other malfunctions	Contact customer service for help
5	The pet does not cooperate	The pet is not used to the device	Some pets may need an acclimation period of about 2 weeks

Imported to the UK by (UK importer):

Sofitech Consulting Ltd, trading as Willow & Paw

Flat 9, Wheat House, Peacock Close, London NW7 1LF, United Kingdom

contact@willowandpaw.co.uk · willowandpaw.co.uk